

Quick measurement

In addition to the automatic measurement, you can also determine the current oil level manually, e.g. after adding engine oil, but such measurements are less accurate.

1. Park the vehicle with a warm engine, i.e. after an uninterrupted drive of at least 6 miles/10 km, on a horizontal surface.
2. Let the engine idle.
3. Press the computer button in the turn indicator lever repeatedly until the oil level display appears in the instrument cluster.
4. Press the computer button for at least 2 seconds.
The oil level is determined. A clock symbol appears during measurement.
5. After approx. 1 minute, the current oil level is displayed.