

REP-REP-RAE8772-7211033 Removing and installing/replacing front left or right seat belt

VIN: E041994

Vehicle: 3' / E90 / SEDAN / M3 / S65 / USA / LL / MANUAL / 2008 / 3


System version: 1.0.10

Data version: 2.29

72 11 033

**Removing and
installing/replacing front left or
right seat belt****Necessary preliminary work:**

- Remove [panel for door post](#)

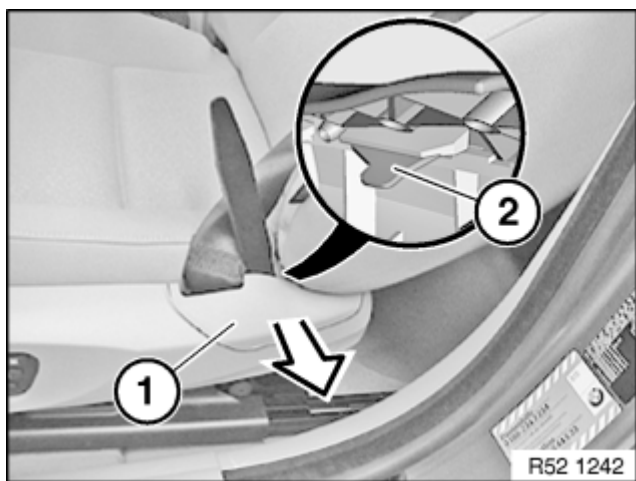

Move backrest to full rearward position.

Unclick release tab (2) for belt anchor fitting trim (1) with plastic wedge.


Release screw (1).

Tightening torque: [72 11 2AZ](#).

Remove anchor fitting (2).

Installation note:

Make sure anchor fitting is correctly seated on seat mechanism pin.

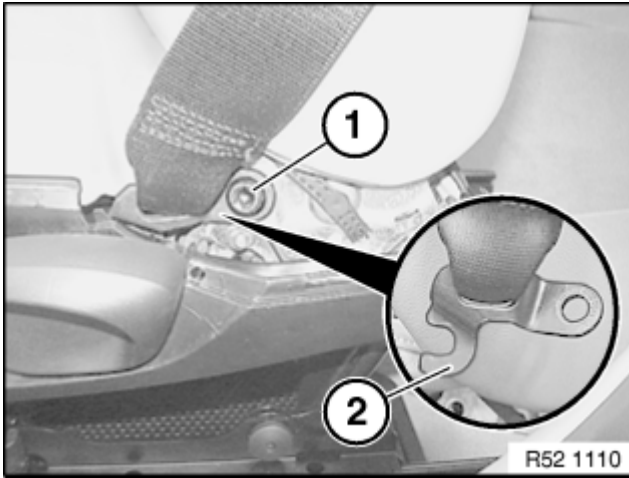

Release screws (1).



Tightening torque: [72 11 4AZ](#).

Remove deflector bar (2).

Release screw (3).

Tightening torque: [72 11 3AZ](#).

Set down belt deflector with belt (4).

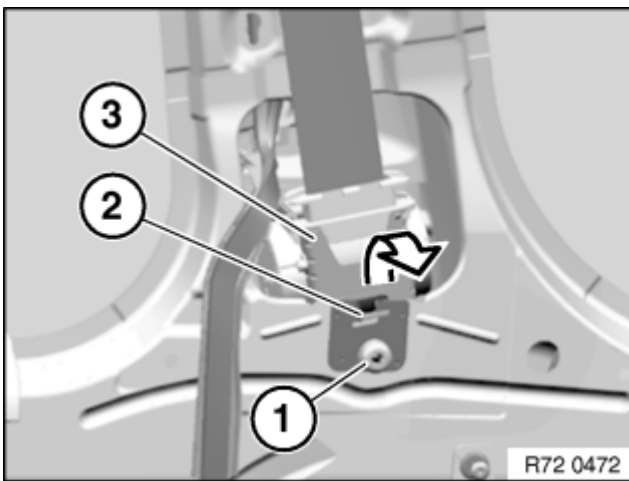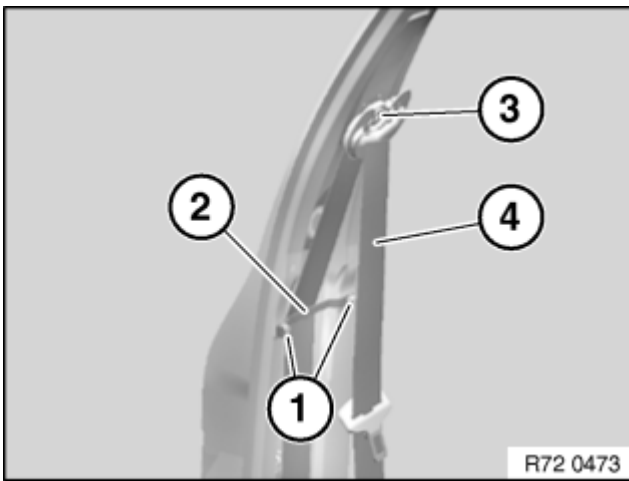

Release screw (1).

Tightening torque: [72 11 1AZ](#).

Remove automatic reel (3).

Installation note:

Coding (2) of automatic reel must be seated in body opening.

Installation note:

Free spaces of (A) and (B) from the seat belt strap to the guide funnel must be of the same size.

